



## Ideal Rip Box installation methodology

1 – Make your electrical cable connection first, using a connector block or other compliant connector.


2 – Hold a RipBox in your hand, insert a broad tip flat screwdriver into a RELEASE PORT (A). There are 2 on a RipBox.

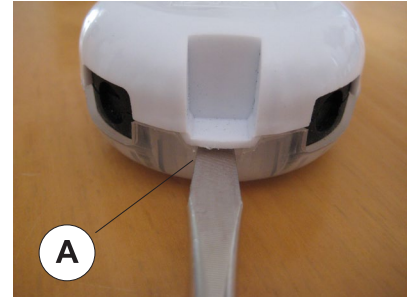


3 – With a sharp twist of the screwdriver, the junction box CLIPS (B) will release and the RipBox will pop open.

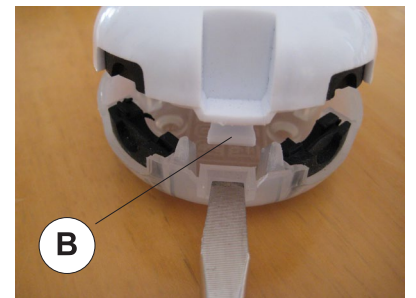

4 – Place the joined cables and connector block into the one half of the RipBox.

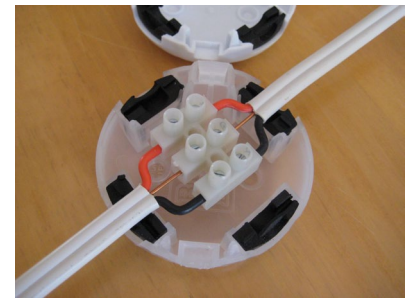

5 – To close the RipBox, position the CLIP GUIDE HOLES (C) over the rear GUIDE POSTS (D) and push them in.

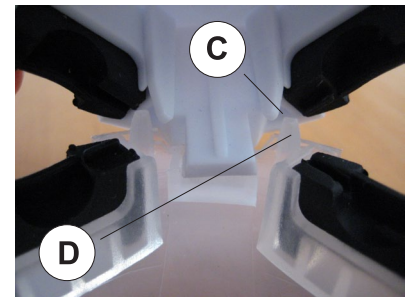

6 – Then gently fold the two halves together till almost closed.



7 – Check that the connector block and cables are in the correct position before firmly pressing the two halves together until the clips engage.

